


iSMA-B-FCU

User Manual

Hardware



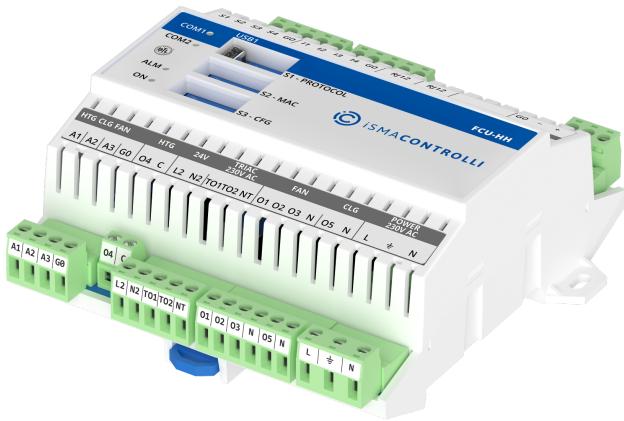

iSMA CONTROLLI S.p.A. - Via Carlo Levi 52, 16010 Sant'Olcese (GE) - Italy | support@ismacontrolli.com



Table of Contents

1		Introduction	3
	1.1	Revision History	3
2		Safety Rules	4
3		Technical Specification	5
4		Hardware Specification	8
	4.1	Dimensions	8
	4.2	Power Supply	8
	4.2.1	24 V AC Power Supply for External Equipment	S
	4.3	Terminals and Internal Connections	9
	4.3.1	iSMA-B-FCU-HH	10
	4.3.2	iSMA-B-FCU-HL	10
	4.3.3	iSMA-B-FCU-LL	11
	4.4	RS485 Communication	12
	4.4.1	Connecting RS485 Communication Bus	12
	4.4.2	RS485 Grounding and Shielding	13
	4.4.3	RS485 Netowrk Termination	13
	4.5	RJ12 Panel Connection	13
	4.6	Front Panel and DIP Switches	14
	4.6.1	USB1 Port	14
	4.6.2	LED	14
	4.6.3	DIP Switch	15
	4.7	Default Settings	18
	4.7.1	Restoring Default Settings	18
5		Inputs and Outputs	19
	5.1	Inputs	19
	5.1.1	Special Inputs	19
	5.1.2	Digital Inputs	21
	5.2	Outputs	21
	5.2.1	Triac Outputs	22
	5.2.2	Digital Outputs	23
	5.2.3	Analog Outputs	26
6		List of Supported Temperature Sensors	28
7		MAC DIP Switch Addressing Table	44

1 Introduction

The iSMA-B-FCU is a fully programmable controller, built with the aim of controlling the FCU. The controller is factory-equipped with the two most popular open communication protocols Modbus ASCII/RTU and BACnet MS/TP, which are selected using DIP switches.

To minimize time and simplify the commissioning process the controller is delivered with universal application, which supports the most popular types of FCU. Dedicated DIP switch allows adjusting parameters of the application. Additionally, in the BACnet protocol, the application has the built-in function, which allows automatically to bind master and slave controllers in groups.

In cases if the standard application does not meet the project requirements, it can be modified or created from scratch. Changing of the application is possible in real-time by USB port. There are three hardware versions which have different types of triac outputs and power supply (iSMA-B-FCU-HH, iSMA-B-FCU-HL).





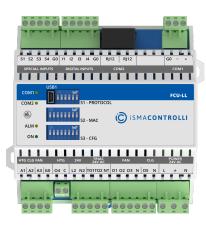


Table 1. FCU controllers

1.1 Revision History

Rev.	Date	Description
1.0	-	First edition
1.1	-	iSMA-B-FCU-LL hardware description added
1.2	-	Company data update
1.3	28 Feb 2022	Rebranded

Table 2. Revision history

2 Safety Rules

- Improper wiring of the product can damage it and lead to other hazards. Make sure that the product has been correctly wired before turning the power on.
- Before wiring or removing/mounting the product, make sure to turn the power off. Failure to do so might cause an electric shock.
- Do not touch electrically charged parts such as power terminals. Doing so might cause an electric shock.
- Do not disassemble the product. Doing so might cause an electric shock or faulty operation.
- Use the product only within the operating ranges recommended in the specification (temperature, humidity, voltage, shock, mounting direction, atmosphere, etc.). Failure to do so might cause a fire or faulty operation.
- Firmly tighten the wires to the terminal. Failure to do so might cause a fire.
- Avoid installing the product in close proximity to high-power electrical devices and cables, inductive loads, and switching devices. Proximity of such objects may cause an uncontrolled interference, resulting in an instable operation of the product.
- Proper arrangement of the power and signal cabling affects the operation of the entire control system. Avoid laying the power and signal wiring in parallel cable trays. It can cause interferences in monitored and control signals.
- It is recommended to power controllers/modules with AC/DC power suppliers. They
 provide better and more stable insulation for devices compared to AC/AC transformer
 systems, which transmit disturbances and transient phenomena like surges and bursts
 to devices. They also isolate products from inductive phenomena from other
 transformers and loads.
- Power supply systems for the product should be protected by external devices limiting overvoltage and effects of lightning discharges.
- Avoid powering the product and its controlled/monitored devices, especially high power and inductive loads, from a single power source. Powering devices from a single power source causes a risk of introducing disturbances from the loads to the control devices.
- If an AC/AC transformer is used to supply control devices, it is strongly recommended to use a maximum 100 VA Class 2 transformer to avoid unwanted inductive effects, which are dangerous for devices.
- Long monitoring and control lines may cause loops in connection with the shared power supply, causing disturbances in the operation of devices, including external communication. It is recommended to use galvanic separators.
- To protect signal and communication lines against external electromagnetic interferences, use properly grounded shielded cables and ferrite beads.
- Switching the digital output relays of large (exceeding specification) inductive loads can cause interference pulses to the electronics installed inside the product. Therefore, it is recommended to use external relays/contactors, etc. to switch such loads. The use of controllers with triac outputs also limits similar overvoltage phenomena.
- Many cases of disturbances and overvoltage in control systems are generated by switched, inductive loads supplied by alternating mains voltage (AC 120/230 V). If they do not have appropriate built-in noise reduction circuits, it is recommended to use external circuits such as snubbers, varistors, or protection diodes to limit these effects.



3 Technical Specification

		iSMA-B-FCU-HH	iSMA-B-FCU-HL	iSMA-B-FCU- LL		
Power Supply	Voltage	230 V AC ± 10%		24 V AC ± 10%		
	Power Consumption	Max. 12 VA (including	7 VA for triac outputs)	riac outputs)		
Special Inputs	Temperature Input	Measurement with att Resolution ±0.1°C Accuracy ±0.2°C at 25				
	Voltage Input	Voltage measurement KΩ) Resolution ±6 mV Accuracy ±50 mV	: from 0 to 10 VDC (Inp	C (Input impedance 120		
	Resistance Input	Resistance measurem Measurement resolut	ad			
	Dry Contact Input	Output current ~0,2 m				
	Measurement Resolution	12 bits				
Digital Inputs	Туре	Dry contact				
	Max. Input Frequency	100 Hz				
Analog Outputs	Voltage Range	0 to 10 V DC				
Outputs	Max. Load Current	5 mA				
	Resolution	12 bits				
	Accuracy	±1%				
Digital Outputs	Resistive Load (FAN, CTG)	6 A at 230 V AC or 6 A at 30 V DC				
(Relays)	Inductive Load AC3 (FAN, CTG)	75 VA at 230 V AC or 10 W at 30 V DC				
	Resistive Load (HTG)	10 A at 230 V AC or 10) A at 30 V DC			
	Inductive Load AC3 (HTG)	1/2 HP at 230 V AC				

Triac Outputs	Load	Min.: 20 mA Max.: 0.5 A at 230 V AC	Min.: 20 mA Max.: 0.3 A at 24 V AC I _{max} = 0.3 A = I _{TO1} + I _{TO2} + I _{24VOut}	Min.: 20 mA Max.: 0.5 A at 24 V AC		
	Peak Load per Channel	1.5 A (30 s)				
	Gate Control	Zero crossing turn ON	Zero crossing turn ON			
	Frequency Range	47 to 63 Hz				
	Snubber	Snubberless Triac				
Power Supply Output	Power Supply Output	24 V AC ± 20%, 7 VA	24 V AC ± 20%, 7 VA* supply is also used fo			
RS485 Interface	RS485	Up to 128 devices Failsafe Receiver (Bus Open, Bus Shorted, Bus Idle)				
	Communication Protocols	Modbus RTU, Modbus ASCII or BACnet MS/TP set by switch				
	Baud Rate	From 2400 to 115200 set by switch				
	Address	0 to 255 set by DIP switch				
RJ12 Interface	RS485	Up to 128 devices				
meeriace	Communication Protocol	Modbus RTU				
	Baud Rate	From 2400 to 115200				
	Power Supply	34 V DC ± 15%, 2.5 W				
USB	USB	Mini USB 2.0				
Ingress Protection	IP	IP40				
Temperature	Storage	- 40°C to +85°C				
	Operating	0°C to +50°C				
Humidity	Relative	5 to 95%				
Connectors	Inputs / Outputs,Power Supply and Communication	Removable				
	HTG Relay	Constant				
	Maximum Cable Size	1.5 mm ²				

iSMA-B-FCU Hardware User Manual

Dimensions	Width	123 mm
	Length	137 mm
	Height	55 mm

Table 3. Technical specification

4 Hardware Specification

4.1 Dimensions

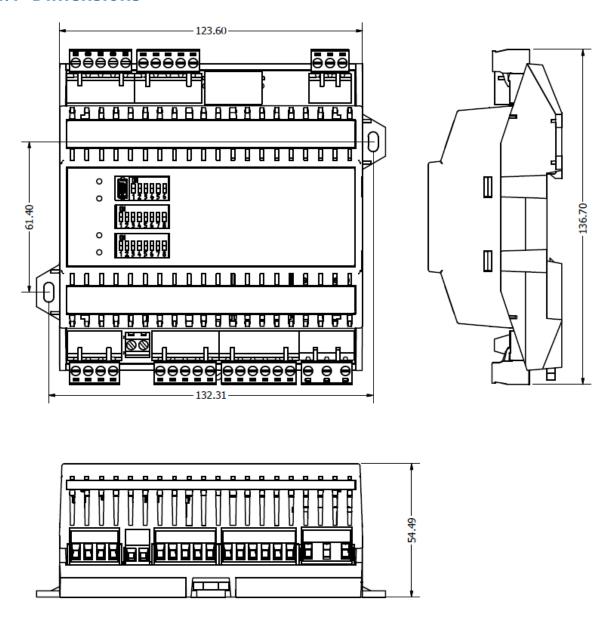


Figure 1. Dimensions

4.2 Power Supply

The iSMA-B-FCU-HH and iSMA-B-FCU-HL versions are designed to work with the 230 V AC power supply. Each iSMA-B-FCU device is equipped with a built-in 6 A fuse protecting the controller and the connected 230 V AC equipment.

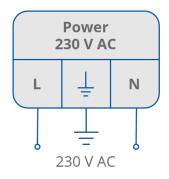


Figure 2. 230 V AC power supply

The iSMA-B-FCU-LL version is designed to work with the 24 V AC power supply. The device is equipped with a built-in 6 A fuse protecting the controller and the connected 24 V AC equipment.

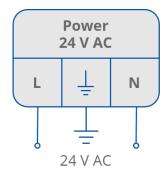


Figure 3. 24 V AC power supply

Note: Total current for digital relay outputs O1-O4 cannot exceed 6A.

WARNING! It is forbidden to use a fuse with current exceeding 6 A! Higher current may permanently damage the device and cause danger to the user and to the equipment!

4.2.1 24 V AC Power Supply for External Equipment

The iSMA-B-FCU-HH is equipped with a 24 V AC, 7 VA power supply output to supply an external equipment like sensors and actuators. This power supply uses a separate coil in the transformer. The 24 V AC power supply terminal connection is labeled L2, N2.

The iSMA-B-FCU-HL is equipped with a 24 V AC power supply output for thermal valves controlled by triac outputs and external devices like sensors and actuators. This power supply uses a separate coil in the transformer. The 24 V AC power supply terminal connection is labeled L2, N2. The total power consumption with thermal valves and external devices cannot exceed 7 VA (\sim 0.3 A).

The iSMA-B-FCU-LL is equipped with a 24 V AC, 7 VA power supply output to supply the external equipment like sensors and actuators. This power supply uses a separate 24 V AC transformer. The external separate power supply terminal connection is labeled L2, N2.

4.3 Terminals and Internal Connections

There are 3 types of hardware available:



- iSMA-B-FCU-HH with 230 V AC power supply and triac outputs;
- iSMA-B-FCU-HL with 230 V AC power supply and 24 V AC triac outputs;
- iSMA-B-FCU-LL with 24 V AC power supply and triac outputs.

4.3.1 iSMA-B-FCU-HH

The iSMA-B-FCU-HH hardware version has a high voltage power supply (230 V AC) and high voltage triac outputs (230 V AC). The triac outputs are connected directly to the main controller power supply, as presented in the diagram below. The maximum current for each triac output is 0,5 A. The maximum power consumed by the external equipment connected to 24 V terminals (L2, N2) cannot exceed 7 VA in total.

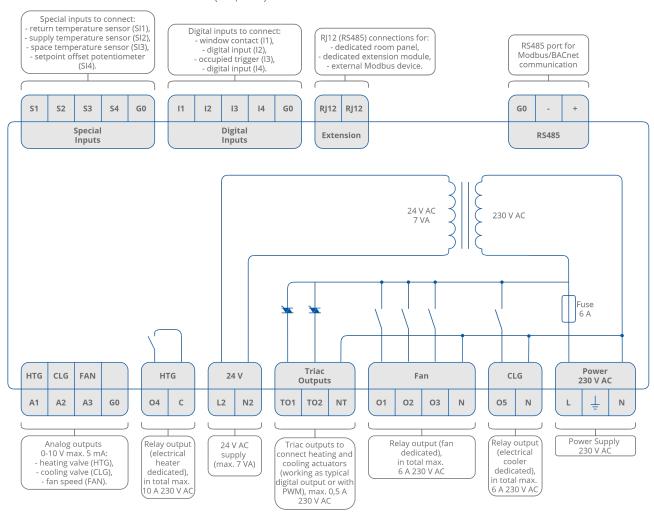


Figure 4. iSMA-B-FCU-HH diagram of terminals and internal connections

4.3.2 iSMA-B-FCU-HL

The iSMA-B-FCU-HL hardware version has a high voltage power supply (230 V AC) and low voltage triac outputs (24 V AC). The triac outputs are connected to a built-in 24 V AC transformer, as shown in the diagram below. The maximum power consumed by the external equipment connected to the triac outputs and to 24 V terminals (L2, N2) cannot exceed 7 VA in total.

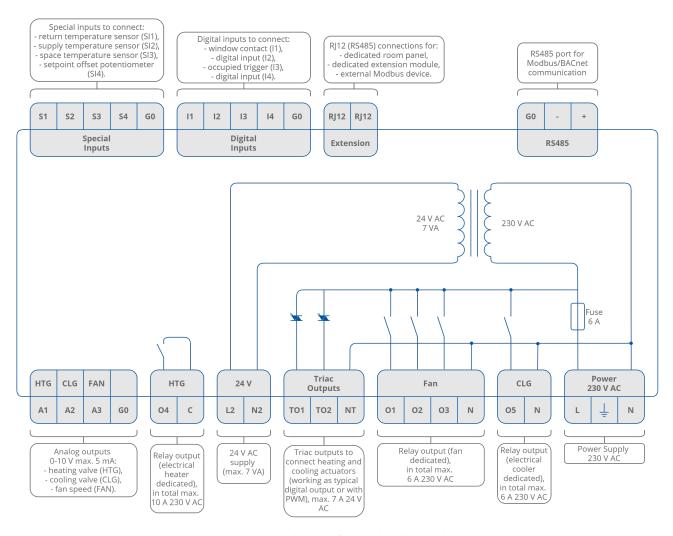


Figure 5. iSMA-B-FCU-HL diagram of terminals and internal connections

4.3.3 iSMA-B-FCU-LL

The iSMA-B-FCU-LL hardware version has a low voltage power supply and triac outputs (24 V AC). The triac outputs are connected to power supply terminals. The maximum current for each of the triac outputs is 0,5 A. The maximum power used by the external equipment connected to the 24 V terminals (L2, N2) cannot exceed 7 VA in total.

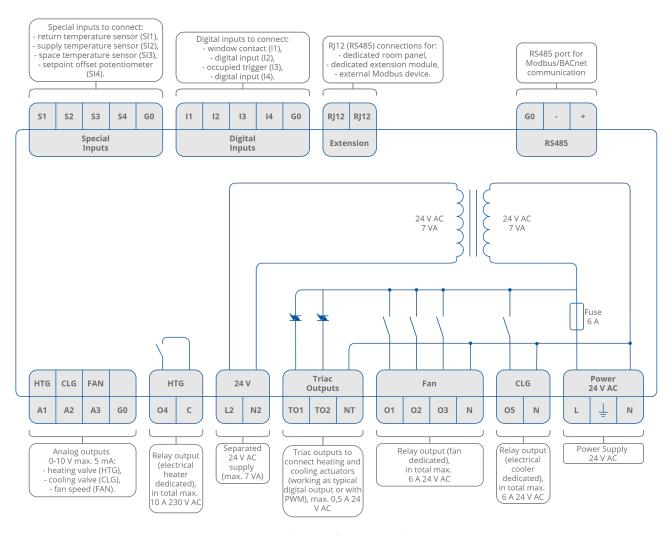


Figure 6. iSMA-B-FCU-LL diagram of terminals and internal connections

4.4 RS485 Communication

4.4.1 Connecting RS485 Communication Bus

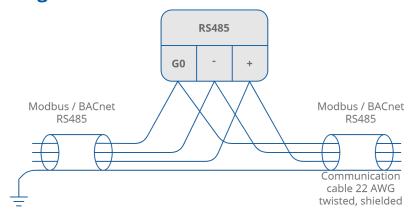


Figure 7. RS485 connection

4.4.2 RS485 Grounding and Shielding

In most cases controllers are installed in enclosures along with other devices, which generate electromagnetic radiation (for example, relays, contactors, transformers, motor invertors, etc.). Such electromagnetic radiation can induce electrical noise into both power and signal lines, as well as direct radiation into the controller, causing negative effects on the system. For this reason, an appropriate grounding, shielding, and other protective steps should be taken at the installation stage to prevent negative electromagnetic radiation effects, for example:

- · control cabinet grounding;
- · cable shield grounding;
- using protective elements for electromagnetic switching devices;
- · proper wiring;
- consideration of cable types and their cross sections;
- and other.

4.4.3 RS485 Netowrk Termination

Transmission line effects often present problems for data communication networks. These problems include reflections and signal attenuation.

To eliminate the presence of reflections of signal from the end of the cable, the cable must be terminated at both ends with a resistor across the line adequate to its characteristic impedance. Both ends must be terminated since the propagation is bidirectional. In case of an RS485 twisted pair cable this termination is typically 120 Ω .

4.5 RJ12 Panel Connection

The RJ12 socket is designed for connecting external modules and LCD panel. The iSMA-B-FCU device has two parallel sockets with the same pin configuration. These sockets provide communication in the Modbus RTU protocol.

The RJ12 socket provides also power supply dedicated for external LCD panels with maximum load up to 2.5 W. Before connecting devices powered from RJ12, please calculate the power supply load. Power consumption of the dedicated wall panels iSMA-B-LP with temperature sensor is 0.5 W, so the maximum number of panels on the bus is 5. The maximum number of Touch Point panels on the bus is also 5.

RJ12 pins are shown in the figure below.

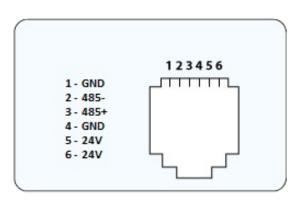




Figure 8. RJ12 pins

For short distance, up to 100 m, it is recommended to use the following cables for connection: standard category 3, 4 wire or 6 wire telephone cable straight without crossing (for example, YTLYP 6x0.12). For longer distance, it is recommended to use a twisted shielded Modbus standard cable.

4.6 Front Panel and DIP Switches

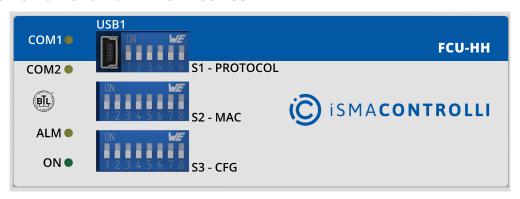


Figure 9. FCU front panel

4.6.1 USB1 Port

The iSMA-B-FCU device has a built-in mini USB1 port designed to manage controller firmware and application, as well as for diagnostics.

This USB1 port also provides controller power supply for commissioning processes and for application diagnostics. If the controller is powered up by a USB, all inputs and outputs are operational (except for triac outputs, which require external power supply).

4.6.2 LED

The iSMA-B-FCU device is equipped with 4 LED diodes for quick status check and diagnostics:

- The power LED (ON) lights up (green) after turning the power on.
- The communication LED (COM1) lights up (orange) for 20 ms after sending each package through the main RS485 port. As long as module receives/sends packages, the communication LED blinks continuously.

- The extension communication LED (COM2) lights up (orange) for 20 ms after sending each package through the extension ports. As long as the module receives/sends packages, the extension communication LED blinks continuously.
- The ALM LED is off by default, the function is programmable through the LED_ALARM component; it blinks very softly if there is a fault during the start-up of Sedona Virtual Machine.
- During the device's reset, when the 6th switch in the S1 PROTOCOL DIP switch is on (default settings restoration mode), the power LED (ON) blinks in 300 ms time intervals. After the switch 6 is switched off, the power LED is lit permanently, and the default settings are restored.
- If the device remains in the bootloader status, the power LED (ON) and the communication LED (COM1) blink alternatively. The communication LED keeps its functionality and blinks also after sending/receiving data packages.

4.6.3 DIP Switch

The iSMA-B-FCU controller is equipped with 3 DIP switches:

- 6-position S1 PROTOCOL DIP switch;
- · 8-position S2 MAC DIP switch;
- 8-position S3 CFG DIP switch.

S1 PROTOCOL DIP Switch: Baud Rate Selection

Transmission baud rate is determined by S1 switch (sections 1, 2, and 3 of the PROTOCOL DIP switch) in accordance with the following table.

1	2	3	Baud Rate
Off (0)	Off (0)	Off (0)	Defined by the user
Off (0)	Off (0)	On (1)	76800
Off (0)	On (1)	Off (0)	4800
Off (0)	On (1)	On (1)	9600
On (1)	Off (0)	Off (0)	19200
On (1)	Off (0)	On (1)	38400
On (1)	On (1)	Off (0)	57600
On (1)	On (1)	On (1)	115200

Table 4. Setting baud rate

S1 PROTOCOL DIP Switch: Protocol Selection

Protocol selection is made with sections 4 and 5 of the PROTOCOL DIP switch according to the table.



4	5	Protocol
Off (0)	Off (0)	Modbus RTU
Off (0)	On (1)	Modbus ASCII
On (1)	Off (0)	BACnet Master
On (1)	On (1)	BACnet Slave

Table 5. Setting protocol

WARNING! In BACnet mode, switch number 4 must be in ON(1) position, and switch number 5 decides if BACnet works in master or slave mode (please check on the above table).

S2 MAC DIP Switch: Setting Controller Address

The controller address is set with the MAC DIP switch. The procedure of setting the address in presented in the figure and table below. The addressing table is available in the separate section.

 


Figure 10. MAC DIP switch

Section of MAC DIP switch	Position	Function
1	On	Add 1 to MAC Address
	Off	Add 0 to MAC Address
2	On	Add 2 to MAC Address
	Off	Add 0 to MAC Address
3	On	Add 4 to MAC Address
	Off	Add 0 to MAC Address
4	On	Add 8 to MAC Address
	Off	Add 0 to MAC Address
5	On	Add 16 to MAC Address
	Off	Add 0 to MAC Address
6	On	Add 32 to MAC Address

Section of MAC DIP switch	Position	Function
	Off	Add 0 to MAC Address
7	On	Add 64 to MAC Address
	Off	Add 0 to MAC Address
8	On	Add 128 to MAC Address
	Off	Add 0 to MAC Address

Table 6. Setting MAC address

Example: Configuration setting of the iSMA-B-FCU device address 83.

Address 83 contains following multiplicity of number 2: 83 = 1 + 2 + 16 + 64. Address DIP switch settings are presented in the table below. All addresses of DIP switch configuration are presented in the separate section.

Address	S 1	S2	S3	S4	S5	S6	S 7	S8
83	On	On	Off	Off	On	Off	On	Off

Table 7. Setting 83 MAC address



Figure 11. MAC DIP switch settings

WARNING! In BACnet network setting, the address above 128 automatically switches BACnet to slave mode. In this mode, the device cannot be discovered in device searching process.

WARNING! Do not set address 255 (all switches in ON position). This address setting is reserved for system operation.

S3 CFG DIP Switch

The iSMA-B-FCU device has the 8-position DIP switch, which can be used in client application. Each of 8 positions can have true or false state. This DIP switch is dedicated for setting configuration in client application.

 


Figure 12. CFG DIP switch



4.7 Default Settings

Out of the box device as well as after restoring default values procedure, has got the following default settings:

Name	Default Value
User baud rate	76800
Stop bits	1
Data bits	8
Parity bits	0
Response delay	0
I1-I4 digital input counters	0

Table 8. Default values

4.7.1 Restoring Default Settings

To restore the default iSMA-B-FCU device settings, follow the steps below:

- Step 1: Turn power supply off
- Step 2: Set section 6 of Protocol switch to ON
- Step 3: Turn on power supply, power LED blinking
- **Step 4:** Switch section 6 of Protocol switch to OFF to restore the default settings. To cancel the reset, turn off the power and switch section 6 of Protocol switch to the OFF position.



5 Inputs and Outputs

5.1 Inputs

The iSMA-B-FCU device is equipped with two types of inputs: 4 digital inputs (for Boolean values) and 4 special inputs (for resistance and voltage measurement).

5.1.1 Special Inputs

The iSMA-B-FCU device has 4 built-in special inputs, which can work in the following modes:

- digital (dry contact);
- analog (0-10 V DC);
- resistance (0-1000 k Ω (1 M Ω));
- temperature (working with NTC sensors).

Special Input in Digital Mode

In this mode, the special input works as a digital input dry contact and reactive Boolean value, false for open circuit and true for close circuit. The circuit status is measured with 1 mA current.

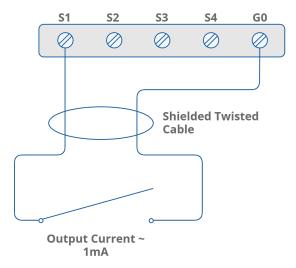


Figure 13. Speical inputs in digital mode connection

Special Input in Analog Mode

In this mode, the special input measures voltage in the range from 0 to 10 V DC (10 000 mV) with 6 mV resolution.

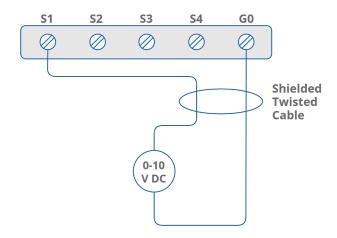


Figure 14. Special inputs in analog mode connection

Special Input in Resistance Mode

In this mode, the special input measures resistance value with the voltage driver. The input works in range from 0 to 1000 k Ω (1 M Ω), with resolution ±20 Ω for 20 k Ω load.

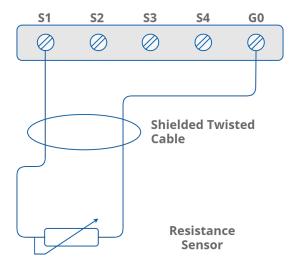


Figure 15. Special inputs in resistance mode connection

Special Input in Temperature Mode

In this mode, the special input measures NTC sensor resistance with the voltage driver and converts to temperature value. The special input is equipped with a built-in conversion table for the following NTC sensors:

- 10K3A1 NTC B=3975K temperature sensor;
- 10K4A1 NTC B=3695K temperature sensor;
- 10K NTC B=3435K Carel temperature sensor;
- 20K6A1 NTC B=4262K temperature sensor;
- 2K3A1 NTC B=3975K temperature sensor;
- 3K3A1 NTC B=3975K temperature sensor;
- 30K6A1 NTC B=4262K temperature sensor;
- SIE1 temperature sensor;
- TAC1 temperature sensor;



• SAT1 temperature sensor.

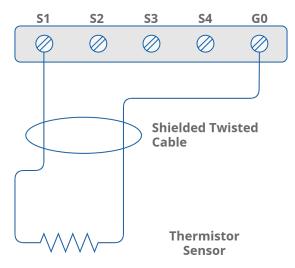


Figure 16. Special inputs in temperature mode connection

5.1.2 Digital Inputs

The iSMA-B-FCU device is equipped with 4 digital inputs. The figure below presents the way they are connected.

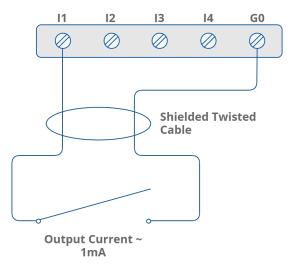


Figure 17. Digital inputs connection

Digital Input Fast Counter

The digital input can work as a counter of dry contact pulses up to 100 Hz. The counter value is saved in the non-volatile EEPROM memory.

WARNING! If the default settings are restored, the value of the counter is set to 0.

5.2 Outputs

The iSMA-B-FCU device is equipped with three types of outputs: 2 triac outputs, 5 digital outputs, and 4 analog outputs.

5.2.1 Triac Outputs

The iSMA-B-FCU device is equipped with two triac outputs designed for heating and cooling thermal valve actuators. Depending on controller model, triac outputs can be connected to actuators with 230 V AC supply (for iSMA-B-FCU-HH) or to actuators with 24 V AC supply (for iSMA-B-FCU-HL and iSMA-B-FCU-LL). In the iSMA-B-FCU-HL version, triac outputs are supplied with 24 V AC from a build-in transformer, whereas in iSMA-B-FCU-LL and iSMA-B-FCU-HH triac outputs are connected directly to power supply terminals.

Triac outputs can work as typical binary outputs (for the binary temperature control) or with PWM modulation. The PWM mode has two parameters:

- duration time in seconds (this value depends on valve parameters);
- fill out (percentage value of signal fill out).

The figure below presents the way actuators are connected to triac outputs (for 4-pipe mode).

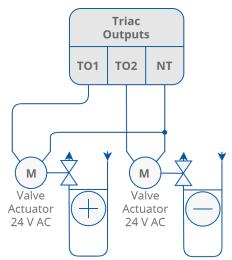


Figure 18. Triac outputs connection

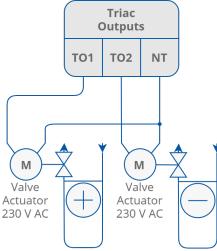


Figure 19. Triac outputs connection

WARNING!

In case of the iSMA-B-FCU-HH or iSMA-B-FCU-LL hardware versions, the actuators connected to each triac output may consume up to 0,5 A under constant load. In some cases the current can be higher for a limited time, 1,5 A up to 30 seconds.



In case of the iSMA-B-FCU-HL controller, the sum of power consumption of both triac outputs and 24 V AC output cannot exceed 0,3 A (7 VA):

 $I_{\text{max}} = 0.3 \text{ A} = I_{\text{TO1}} + I_{\text{TO2}} + I_{\text{24VOut}}.$

5.2.2 Digital Outputs

All digital outputs are based on relays, which can operate with 230 V AC voltage (in iSMA-B-FCU-LL, digital outputs are working with 24 V AC). The iSMA-B-FCU device has 2 types of digital outputs:

- O1-03 and 05: relay outputs connected directly to power supply terminal;
- O4: a relay separated from iSMA-B-FCU device circuits.

O1-O3 Fan Relays

The iSMA-B-FCU device is equipped with three relay outputs, designed for connecting up to 3 speed fans. The way the fans are connected (depending on the number of speeds) is presented in the figure below. The common terminal for those outputs is connected directly to the power supply "L" terminal.

WARNING! Outputs O1-O3 and output O5 are protected by a built-in 6 A fuse. Total current for digital relays outputs O1-O3 and O5 cannot exceed 6 A.

WARNING! It is forbidden to use a fuse with current exceeding 6 A! Higher current may permanently damage device and cause danger to the user and to the equipment!

WARNING! In iSMA-B-FCU-LL, the 24 V AC fan motor is required.

The exemplary fan connection is presented in the figure below.

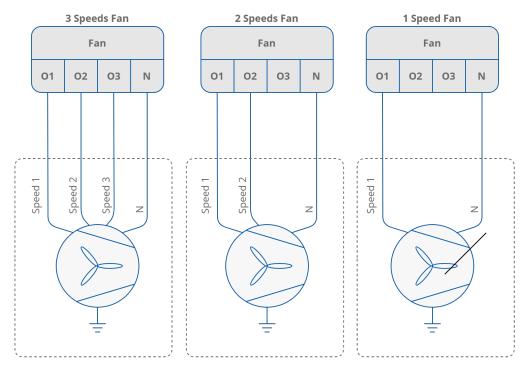


Figure 20. O1-O3 digital outputs, examples of conenctions

O4 HTG Relay

The iSMA-B-FCU device is equipped with relay output, which in the FCU application is dedicated to an external heater. This relay is separated from the rest of the control circuit. Current consumption cannot exceed 10 A with 250 V AC power supply. The figure below presents the way of connecting.

WARNING! HTG relay voltage is always limited to 250 V AC, irrespectively of the power supply version of the FCU controller.

WARNING! This digital output is equipped with a separate circuit with 10 A relay. This circuit requires using external fuse protection up to 10 A. The current higher than 10 A may permanently damage device and cause danger to the user and to the equipment!

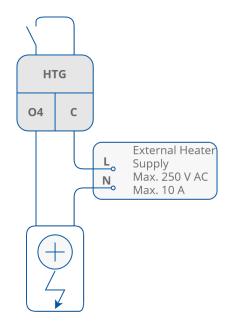


Figure 21. Example of an electrical heater connection

O5 CLG Relay

The iSMA-B-FCU device is equipped with a relay output, which in the FCU application is dedicated to an external cooler. This relay output is internally connected to the power supply, therefore there is no need to connect external supply. In iSMA-B-FCU-HH and iSMA-B-FCU-HL the output voltage in high state is 230 V AC, and in iSMA-B-FCU-LL version the high state voltage is 24 V AC. Current consumption cannot exceed 6 A. An exemplary way of connecting is presented in the figure below.

WARNING! Output O4 and outputs O1-O3 are protected by a 6 A fuse. Total current for digital relay outputs cannot exceed 6A.

WARNING! It is forbidden to use a fuse with current exceeding 6A! Higher current may permanently damage the device and cause a danger to the user and to the equipment!

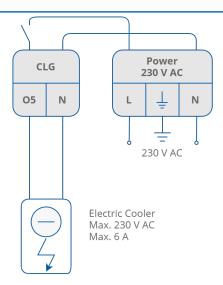


Figure 22. O5 digital output, example of 230 V AC electrical cooler connection (iSMA-B-FCU-HH, iSMA-B-FCU-HL)



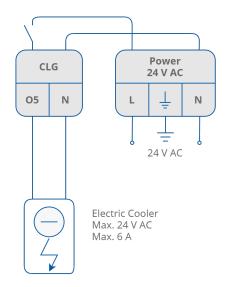


Figure 23. O5 digital output, example of 24 V AC electrical cooler connection (iSMA-B-FCU-LL)

5.2.3 Analog Outputs

The iSMA-B-FCU device is equipped with 3 analog outputs 0-10 V DC. These outputs are designed for controlling the following actuators:

- A1 (HTG), analog heating valve actuator;
- A2 (CTG), analog cooling valve actuator;
- A3 (FAN), analog fan speed control.

The recommended way of connecting analog outputs is presented in the figures below.

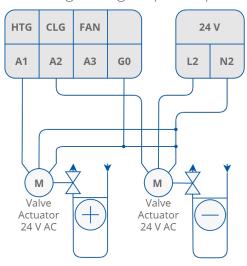


Figure 24. Analog outputs, example of connecting 0-10 V analog valve actuators

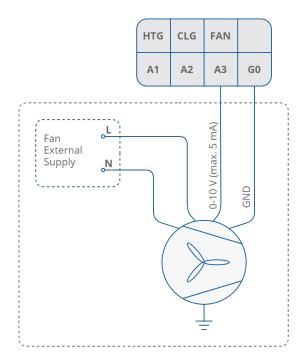


Figure 25. Analog outputs, example of connecting 0-10 V analog fan control

6 List of Supported Temperature Sensors

- 10K3A1
- 10K4A1
- 10K
- 20K6A1
- 2.2K3A1
- 3K3A1
- 30K6A1
- SIE1
- TAC1
- SAT1

No.	1
Sensor	10K3A1
β coefficient	3975K
Manufacturers	Cylon, Honeywell, Johnson, Satchwell, Seachange
°C	Ω
-45	491749
-40	335671
-35	241840
-30	176683
-25	131251
-20	96974
-15	72895
-10	55298
-5	42314
0	32650
5	25396
10	19904
15	15714
20	12494
25	10000

No.	1
30	8056
35	6530
40	5325
45	4367
50	3601
55	2985
60	2487
65	2082
70	1751
75	1480
80	1256
85	1070
90	916
95	787
100	678
105	587
110	510
115	444
120	388
125	340
No.	2
Sensor	10K4A1
β coefficient	3695K
Manufacturers	Andover, Delta Controls, Siebe, York
°C	Ω
-45	330749

No.	2
-40	239831
-35	181532
-30	135233
-25	105081
-20	78930
-15	61030
-10	47549
-5	37316
0	29490
5	23462
10	18787
15	15136
20	12268
25	10000
30	8197
35	6754
40	5594
45	4656
50	3893
55	3271
60	2760
65	2339
70	1990
75	1700
80	1458
85	1255

No.	2
90	1084
95	939
100	817
105	713
110	624
115	547
120	482
125	426

No.	3
Sensor	10K
β coefficient	3435K
Manufacturers	Carel
°C	Ω
-40	188500
-35	144100
-30	111300
-25	86430
-20	67770
-15	53410
-10	42470
-5	33900
0	27280
5	22050
10	17960
15	14690

No.	3
20	12090
25	10000
30	8313
35	6940
40	5827
45	4912
50	4161
55	3536
60	3020
65	2588
70	2228
75	1924
80	1668
85	1451
90	1266
95	1108
100	973
105	857
110	758
115	672
120	597
125	531

No.	4
Sensor	20K6A1
β coefficient	4262K



No.	4
Manufacturers	Honeywell
°C	Ω
-40	806800
-35	574400
-30	413400
-25	300400
-20	220600
-15	163480
-10	122260
-5	92220
0	70140
5	53780
10	41540
15	32340
20	25340
25	20000
30	15886
35	12698
40	10212
45	8260
50	6718
55	5494
60	4518
65	3732
70	3098
75	2586

No.	4
80	2166
85	1823
90	1541
95	1308
100	1114
105	953
110	818
115	704
120	609
125	528

No.	5
Sensor	2.2K3A1
β coefficient	3975K
Manufacturers	Ambiflex, Johnson
°C	Ω
_50	154464
-45	
-40	77081
-35	
-30	40330
-25	
-20	22032
-15	
-10	12519
-5	9529

No.	5
0	7373
5	5719
10	4487
15	3539
20	2814
25	2252
30	1814
35	1471
40	1199
45	983
50	812
55	672
60	561
65	469
70	395
75	333
80	284
85	241
90	207
95	177
100	154
105	132
110	116
115	
120	88
125	

No.	6
Sensor	3K3A1
β coefficient	3975K
Manufacturers	Alerton
°C	Ω
-50	200348
-45	150524
-40	100701
-35	76853
-30	53005
-25	41048
-20	29092
-15	21868
-10	16589
-5	12694
0	9795
5	7619
10	5971
15	4714
20	3748
25	3000
30	2417
35	1959
40	1598
45	1310
50	1080
55	896



No.	6
60	746
65	625
70	526
75	444
80	377
85	321
90	275
95	236
100	204
105	176
110	153
115	133
120	117
125	102

No.	7
Sensor	30K6A1
β coefficient	4262K
Manufacturers	Drayton
°C	Ω
-30	622911
-25	477393
-20	331876
-15	245785
-10	183697
-5	138502

No.	7
0	105305
5	60713
10	62347
15	48511
20	38019
25	30000
30	23828
35	19046
40	15317
45	12390
50	10079
55	8243
60	6777
65	5600
70	4650
75	3879
80	3251
85	2737
90	2313
95	1963
100	1672
105	1430
110	1228
115	1058
120	915
125	793



No.	8
Sensor	SIE1
Manufacturers	Barber Colman, Siebe
°C	Ω
-50	10732
-45	10624
-40	10517
-35	10344
-30	10172
-25	9913
-20	9654
-15	9320
-10	8933
-5	8496
0	8044
5	7489
10	6938
15	6370
20	5798
25	5238
30	4696
35	4185
40	3707
45	3271
50	2875
55	2521
60	2206



No.	8
65	1929
70	1685
75	1472
80	1287
85	1127
90	986
95	866
100	760
105	670
110	590
115	522
120	462
125	410

No.	9
Sensor	TAC1
β coefficient	3500K
Manufacturers	TAC
°C	Ω
-40	39024
-35	29358
-30	22284
-25	17073
-20	13192
-15	10276
-10	8068

No.	9
-5	6382
0	5085
5	4078
10	3294
15	2676
20	2188
25	1800
30	1488
35	1237
40	1034
45	869
50	733
55	622
60	529
65	453
70	389
75	335
80	290
85	252
90	220
95	192
100	169
105	149
110	131
115	116
120	103

No.	9
125	92

No.	10
Sensor	SAT1
Manufacturers	Satchwell
°C	Ω
-45	9652
-40	9584
-35	9467
-30	9349
-25	9159
-20	8968
-15	8708
-10	8396
-5	8031
0	7614
5	7150
10	6649
15	6121
20	5580
25	5039
30	4513
35	4012
40	3545
45	3117
50	2730

No.	10
55	2386
60	2082
65	1816
70	1585
75	1385
80	1213
85	1064
90	937
95	828
100	734
105	654
110	585
115	525
120	474
125	429

7 MAC DIP Switch Addressing Table

Address	S 1	S2	S 3	S4	S5	S6	S7	S8
1	On							
2		On						
3	On	On						
4			On					
5	On		On					
6		On	On					
7	On	On	On					
8				On				
9	On			On				
10		On		On				
11	On	On		On				
12			On	On				
13	On		On	On				
14		On	On	On				
15	On	On	On	On				
16					On			
17	On				On			
18		On			On			
19	On	On			On			
20			On		On			
21	On		On		On			
22		On	On		On			
23	On	On	On		On			
24				On	On			
25	On			On	On			
26		On		On	On			

27	On	On		On	On		
28			On	On	On		
29	On		On	On	On		
30		On	On	On	On		
31	On	On	On	On	On		
32						On	
33	On					On	
34		On				On	
35	On	On				On	
36			On			On	
37	On		On			On	
38		On	On			On	
39	On	On	On			On	
40				On		On	
41	On			On		On	
42		On		On		On	
43	On	On		On		On	
44			On	On		On	
45	On		On	On		On	
46		On	On	On		On	
47	On	On	On	On		On	
48					On	On	
49	On				On	On	
50		On			On	On	
51	On	On			On	On	
52			On		On	On	
53	On		On		On	On	
54		On	On		On	On	

55 On On On On On On On 56 On I I On On On I I 57 On On On On On On I I 58 On On On On On On On I I 59 On On On On On On On I I I I On On On On I									
57 On On<	55	On	On	On		On	On		
58 On On<	56				On	On	On		
59 On On<	57	On			On	On	On		
60 Image: Control of the c	58		On		On	On	On		
61 On On<	59	On	On		On	On	On		
62 On On<	60			On	On	On	On		
63 On On<	61	On		On	On	On	On		
64 On On<	62		On	On	On	On	On		
65 On Image: Control or control	63	On	On	On	On	On	On		
66 On On<	64							On	
67 On On<	65	On						On	
68 On On <td< td=""><td>66</td><td></td><td>On</td><td></td><td></td><td></td><td></td><td>On</td><td></td></td<>	66		On					On	
69 On On <td< td=""><td>67</td><td>On</td><td>On</td><td></td><td></td><td></td><td></td><td>On</td><td></td></td<>	67	On	On					On	
70 On On<	68			On				On	
71 On On <td< td=""><td>69</td><td>On</td><td></td><td>On</td><td></td><td></td><td></td><td>On</td><td></td></td<>	69	On		On				On	
72 00 <td< td=""><td>70</td><td></td><td>On</td><td>On</td><td></td><td></td><td></td><td>On</td><td></td></td<>	70		On	On				On	
73 On On <td< td=""><td>71</td><td>On</td><td>On</td><td>On</td><td></td><td></td><td></td><td>On</td><td></td></td<>	71	On	On	On				On	
74 On On <td< td=""><td>72</td><td></td><td></td><td></td><td>On</td><td></td><td></td><td>On</td><td></td></td<>	72				On			On	
75 On On <td< td=""><td>73</td><td>On</td><td></td><td></td><td>On</td><td></td><td></td><td>On</td><td></td></td<>	73	On			On			On	
76 On On<	74		On		On			On	
77 On On<	75	On	On		On			On	
78 On On<	76			On	On			On	
79 On	77	On		On	On			On	
80 On On On 81	78		On	On	On			On	
81 On On On	79	On	On	On	On			On	
	80					On		On	
82 On On On	81	On				On		On	
	82		On			On		On	

83 On On<									
85 On On<	83	On	On			On		On	
86 On On<	84			On		On		On	
87 On On<	85	On		On		On		On	
88 On On<	86		On	On		On		On	
89 On Con On On	87	On	On	On		On		On	
90 On On<	88				On	On		On	
91	89	On			On	On		On	
92	90		On		On	On		On	
93 On On<	91	On	On		On	On		On	
94 On On<	92			On	On	On		On	
95 On	93	On		On	On	On		On	
96	94		On	On	On	On		On	
97 On	95	On	On	On	On	On		On	
98 On On <td< td=""><td>96</td><td></td><td></td><td></td><td></td><td></td><td>On</td><td>On</td><td></td></td<>	96						On	On	
99 On On<	97	On					On	On	
100 0n 0n <t< td=""><td>98</td><td></td><td>On</td><td></td><td></td><td></td><td>On</td><td>On</td><td></td></t<>	98		On				On	On	
101 On On <t< td=""><td>99</td><td>On</td><td>On</td><td></td><td></td><td></td><td>On</td><td>On</td><td></td></t<>	99	On	On				On	On	
102 On On <t< td=""><td>100</td><td></td><td></td><td>On</td><td></td><td></td><td>On</td><td>On</td><td></td></t<>	100			On			On	On	
103 On On <t< td=""><td>101</td><td>On</td><td></td><td>On</td><td></td><td></td><td>On</td><td>On</td><td></td></t<>	101	On		On			On	On	
104 On On On On 105 On On On On 106 On On On On 107 On On On On 108 On On On On 109 On On On On	102		On	On			On	On	
105 On On <t< td=""><td>103</td><td>On</td><td>On</td><td>On</td><td></td><td></td><td>On</td><td>On</td><td></td></t<>	103	On	On	On			On	On	
106 On On On On On 107 On On On On On 108 On On On On On 109 On On On On On	104				On		On	On	
107 On On	105	On			On		On	On	
108 On On On On 109 On On On On	106		On		On		On	On	
109 On On On On	107	On	On		On		On	On	
	108			On	On		On	On	
110 On On On On On	109	On		On	On		On	On	
	110		On	On	On		On	On	

111	On	On	On	On		On	On	
112					On	On	On	
113	On				On	On	On	
114		On			On	On	On	
115	On	On			On	On	On	
116			On		On	On	On	
117	On		On		On	On	On	
118		On	On		On	On	On	
119	On	On	On		On	On	On	
120				On	On	On	On	
121	On			On	On	On	On	
122		On		On	On	On	On	
123	On	On		On	On	On	On	
124			On	On	On	On	On	
125	On		On	On	On	On	On	
126		On	On	On	On	On	On	
127	On	On	On	On	On	On	On	
BACnet WARNING! A	Addressin	g in the ra	ınge belov	w will run	devices ir	BACnet	slave mod	le
128								On
129	On							On
130		On						On
131	On	On						On
132			On					On
133	On		On					On
134		On	On					On
135	On	On	On					On
136				On				On

137 On								
139 On On On On On On On On 140 On On On On On On On On 141 On On On On On On On On 142 On On On On On On On On 143 On On On On On On On On On 144 On	137	On			On			On
140 Image: color of the color	138		On		On			On
141 On	139	On	On		On			On
142 On	140			On	On			On
143 On	141	On		On	On			On
144 144 144 144 144 145 145 145 145 146 147 148 149 140 140 140 141 147 147 147 147 147 148 144 <td>142</td> <td></td> <td>On</td> <td>On</td> <td>On</td> <td></td> <td></td> <td>On</td>	142		On	On	On			On
145 On Image: Control of the control of	143	On	On	On	On			On
146 On On Indicate the problem of the	144					On		On
147 On	145	On				On		On
148 1	146		On			On		On
149 On Image: Control or contro	147	On	On			On		On
150 On	148			On		On		On
151 On On On On On On On 152 Image: Control or	149	On		On		On		On
152 1	150		On	On		On		On
153 On On On On On On 154 On On On On On On 155 On On On On On On On 156 On On On On On On On On 157 On 158 On On <td>151</td> <td>On</td> <td>On</td> <td>On</td> <td></td> <td>On</td> <td></td> <td>On</td>	151	On	On	On		On		On
154 On On <t< td=""><td>152</td><td></td><td></td><td></td><td>On</td><td>On</td><td></td><td>On</td></t<>	152				On	On		On
155 On On On On On On On On On 156 On On On On On On On On On 157 On 158 On	153	On			On	On		On
156 Image: color of the	154		On		On	On		On
157 On On <t< td=""><td>155</td><td>On</td><td>On</td><td></td><td>On</td><td>On</td><td></td><td>On</td></t<>	155	On	On		On	On		On
158 On On <t< td=""><td>156</td><td></td><td></td><td>On</td><td>On</td><td>On</td><td></td><td>On</td></t<>	156			On	On	On		On
159 On On <t< td=""><td>157</td><td>On</td><td></td><td>On</td><td>On</td><td>On</td><td></td><td>On</td></t<>	157	On		On	On	On		On
160 On On On 161 On On On 162 On On On 163 On On On	158		On	On	On	On		On
161 On On <t< td=""><td>159</td><td>On</td><td>On</td><td>On</td><td>On</td><td>On</td><td></td><td>On</td></t<>	159	On	On	On	On	On		On
162 On On On On 163 On On On On	160						On	On
163 On On On On	161	On					On	On
	162		On				On	On
164 On On On	163	On	On				On	On
	164			On			On	On

165 On On									
167	165	On		On			On		On
168	166		On	On			On		On
169	167	On	On	On			On		On
170	168				On		On		On
171 On On	169	On			On		On		On
172	170		On		On		On		On
173 On On	171	On	On		On		On		On
174 On On	172			On	On		On		On
175 On On	173	On		On	On		On		On
176 On On	174		On	On	On		On		On
177 On On	175	On	On	On	On		On		On
178 On On	176					On	On		On
179 On On	177	On				On	On		On
180 On On	178		On			On	On		On
181 On On On On On On 182 On On On On On On On 183 On On On On On On On 184 On On On On On On On 185 On On On On On On On 186 On On On On On On On 187 On On On On On On On 188 On On On On On On On 190 On On On On On On On On 191 On On On On On On On On On	179	On	On			On	On		On
182 On On <t< td=""><td>180</td><td></td><td></td><td>On</td><td></td><td>On</td><td>On</td><td></td><td>On</td></t<>	180			On		On	On		On
183 On On <t< td=""><td>181</td><td>On</td><td></td><td>On</td><td></td><td>On</td><td>On</td><td></td><td>On</td></t<>	181	On		On		On	On		On
184 On On On On 185 On On On On On 186 On On On On On 187 On On On On On 188 On On On On On 189 On On On On On On 190 On On On On On On 191 On On On On On On	182		On	On		On	On		On
185 On On On On On 186 On On On On On 187 On On On On On 188 On On On On On 189 On On On On On 190 On On On On On 191 On On On On On	183	On	On	On		On	On		On
186 On On On On On 187 On On On On On On 188 On On On On On On 189 On On On On On On 190 On On On On On On 191 On On On On On On	184				On	On	On		On
187 On On	185	On			On	On	On		On
188 On On On On On 189 On On On On On On 190 On On On On On On On 191 On On On On On On On	186		On		On	On	On		On
189 On On	187	On	On		On	On	On		On
190 On	188			On	On	On	On		On
191 On On On On On On	189	On		On	On	On	On		On
	190		On	On	On	On	On		On
192 On On	191	On	On	On	On	On	On		On
	192							On	On

193 On								
195 On	193	On					On	On
196 0n	194		On				On	On
197 On	195	On	On				On	On
198 On	196			On			On	On
199 On	197	On		On			On	On
200 Image: contract of the contract of	198		On	On			On	On
201 On Image: Control of the control of	199	On	On	On			On	On
202 On	200				On		On	On
203 On	201	On			On		On	On
204 On	202		On		On		On	On
205 On	203	On	On		On		On	On
206 On	204			On	On		On	On
207 On	205	On		On	On		On	On
208 On	206		On	On	On		On	On
209 On	207	On	On	On	On		On	On
210 On On <t< td=""><td>208</td><td></td><td></td><td></td><td></td><td>On</td><td>On</td><td>On</td></t<>	208					On	On	On
211 On On <t< td=""><td>209</td><td>On</td><td></td><td></td><td></td><td>On</td><td>On</td><td>On</td></t<>	209	On				On	On	On
212 On On <t< td=""><td>210</td><td></td><td>On</td><td></td><td></td><td>On</td><td>On</td><td>On</td></t<>	210		On			On	On	On
213 On On <t< td=""><td>211</td><td>On</td><td>On</td><td></td><td></td><td>On</td><td>On</td><td>On</td></t<>	211	On	On			On	On	On
214 On On On On On On 215 On On On On On On 216 On On On On On On 217 On On On On On On 218 On On On On On On 219 On On On On On On	212			On		On	On	On
215 On On <t< td=""><td>213</td><td>On</td><td></td><td>On</td><td></td><td>On</td><td>On</td><td>On</td></t<>	213	On		On		On	On	On
216 On On On On On 217 On On On On On 218 On On On On On 219 On On On On On On	214		On	On		On	On	On
217 On	215	On	On	On		On	On	On
218 On	216				On	On	On	On
219 On On On On On	217	On			On	On	On	On
	218		On		On	On	On	On
On On On On On	219	On	On		On	On	On	On
	220			On	On	On	On	On

221	On		On	On	On		On	On
222		On	On	On	On		On	On
223	On	On	On	On	On		On	On
224						On	On	On
225	On					On	On	On
226		On				On	On	On
227	On	On				On	On	On
228			On			On	On	On
229	On		On			On	On	On
230		On	On			On	On	On
231	On	On	On			On	On	On
232				On		On	On	On
233	On			On		On	On	On
234		On		On		On	On	On
235	On	On		On		On	On	On
236			On	On		On	On	On
237	On		On	On		On	On	On
238		On	On	On		On	On	On
239	On	On	On	On		On	On	On
240					On	On	On	On
241	On				On	On	On	On
242		On			On	On	On	On
243	On	On			On	On	On	On
244			On		On	On	On	On
245	On		On		On	On	On	On
246		On	On		On	On	On	On
247	On	On	On		On	On	On	On
248				On	On	On	On	On

iSMA-B-FCU Hardware User Manual

249	On			On	On	On	On	On
250		On		On	On	On	On	On
251	On	On		On	On	On	On	On
252			On	On	On	On	On	On
253	On		On	On	On	On	On	On
254		On						
255	On							

Table 9. MAC addresses